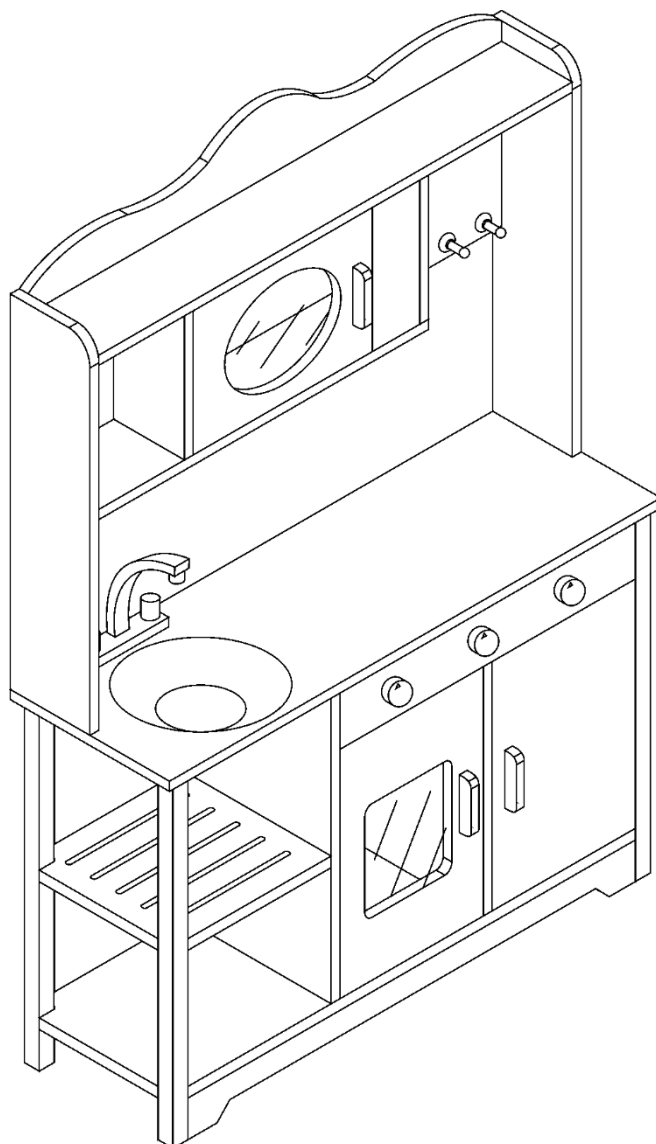 




















Návod na montáž










**UPOZORNENIE! TENTO VÝROBOK MUSÍ
MONTOVAŤ DOSPELÁ OSOBA. NIE JE VHODNÝ
PRE DETI DO 3 ROKOV.**



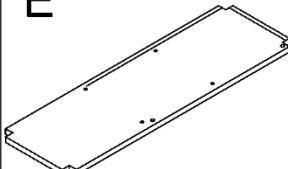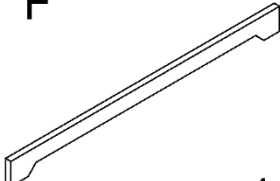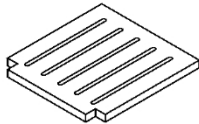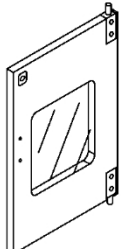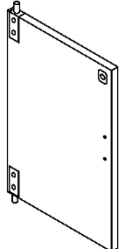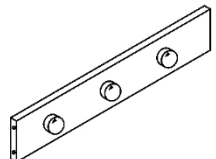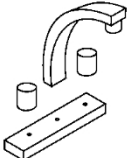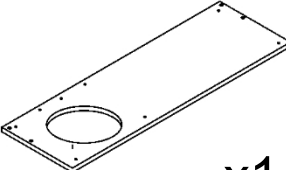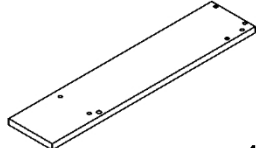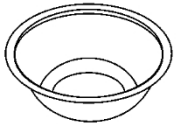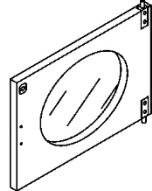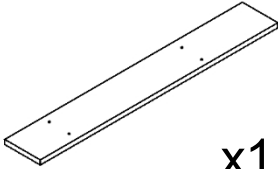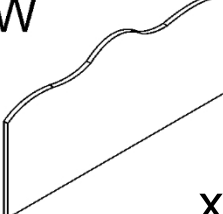                  
VYROBENÉ V ČÍNE

A  x1	B  x1	C  x1	D  x1	E  x1
F  x1	G  x1	H  x1	I  x1	J  x1
K  x1	L  x2	M  x1	N  x1	O  x1
P  x1	Q  x1	R  x2	S  x1	T  x1
U  x1	V  x1	W  x1	X  x1	Y  x1

    
1  4x29 x9	2  4x25 x29	3  4x25 x2	4  5x25 x14	5  3,5x20 x6	
6 3x1 10	7  x3	8 x1	9  x2	10  x4	11 x1

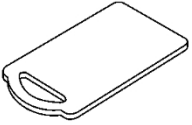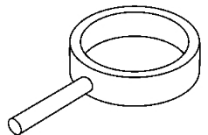   				 x2	
		 x2	 x2		

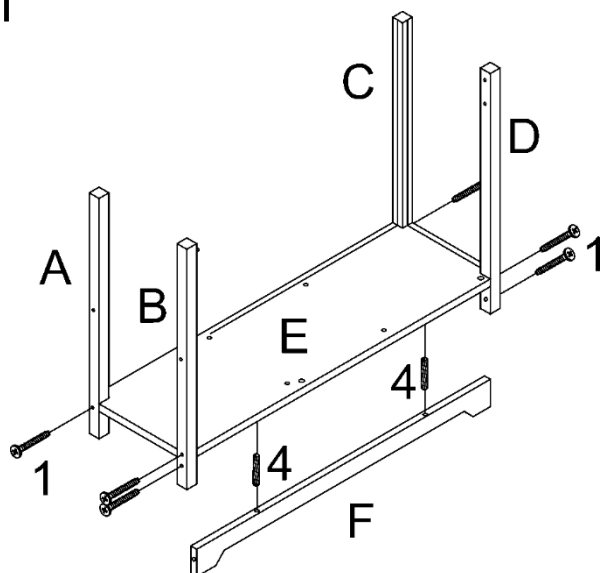 
01




02

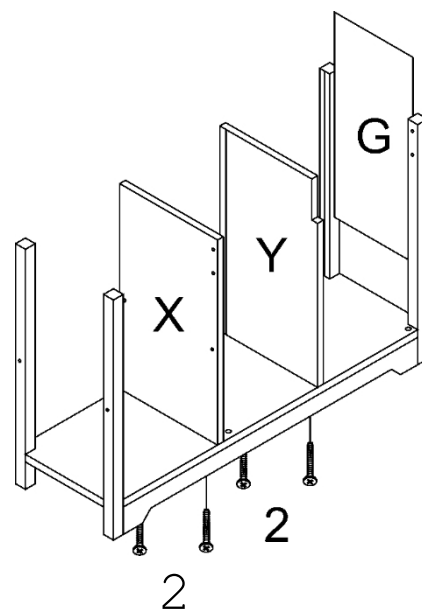 


03

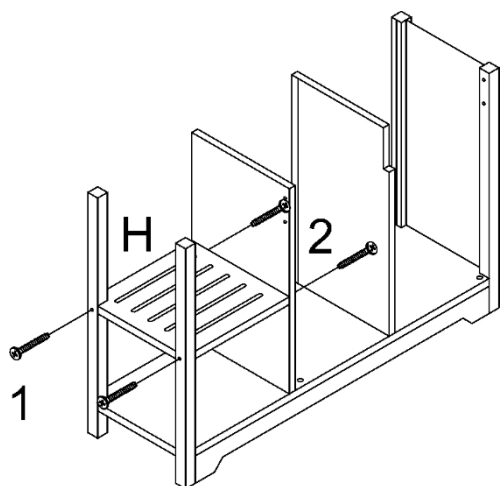 


04

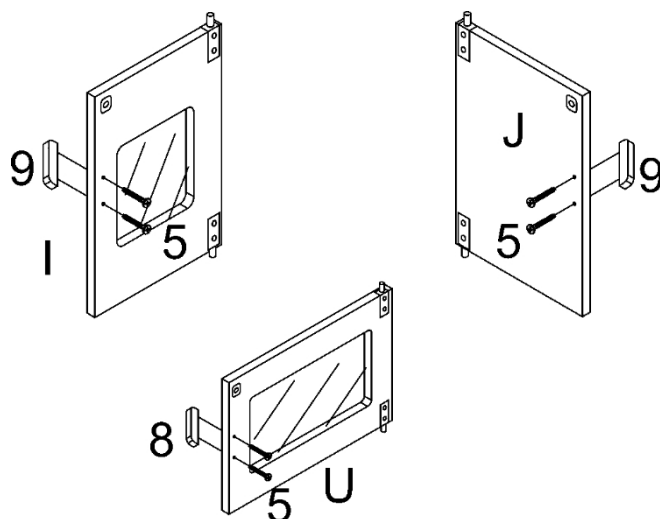 


05

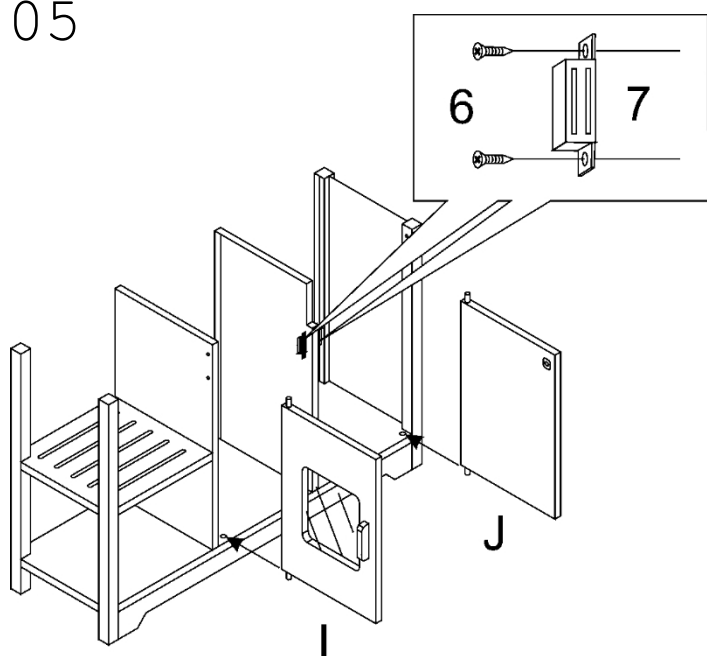 


06

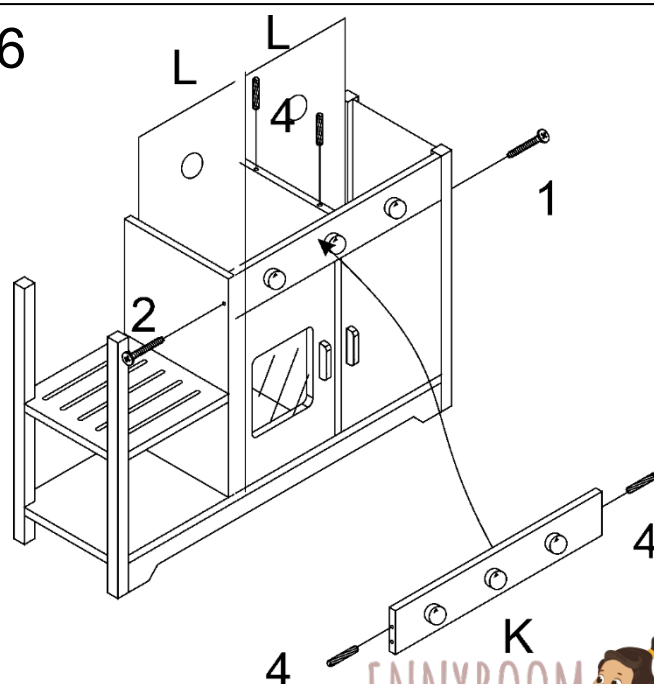 


07

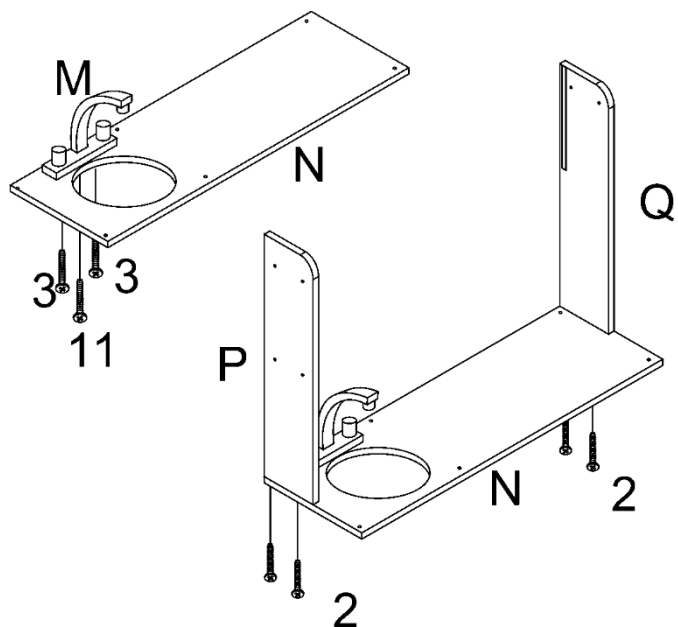 


08

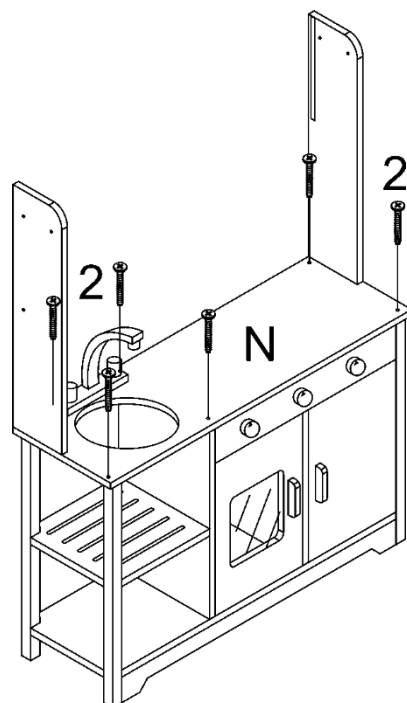 


09

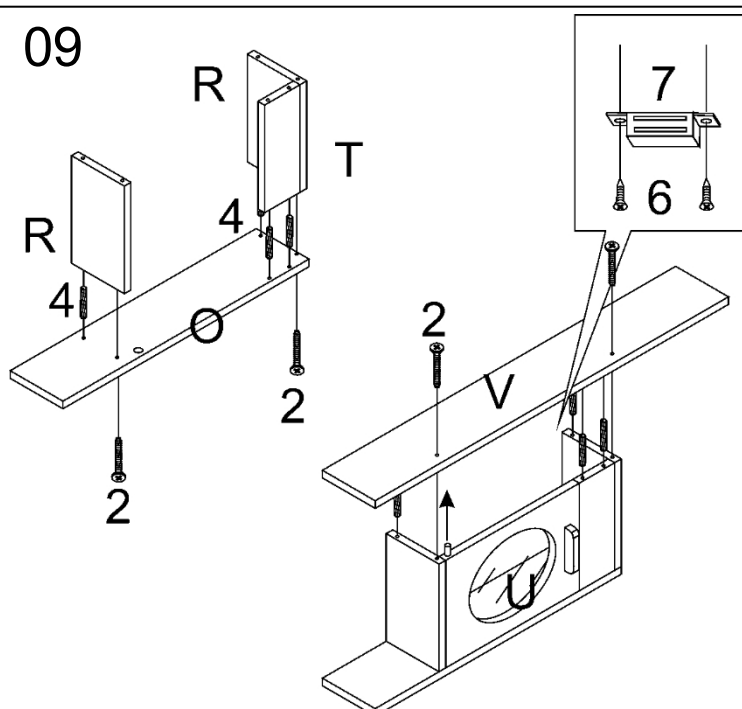 

10

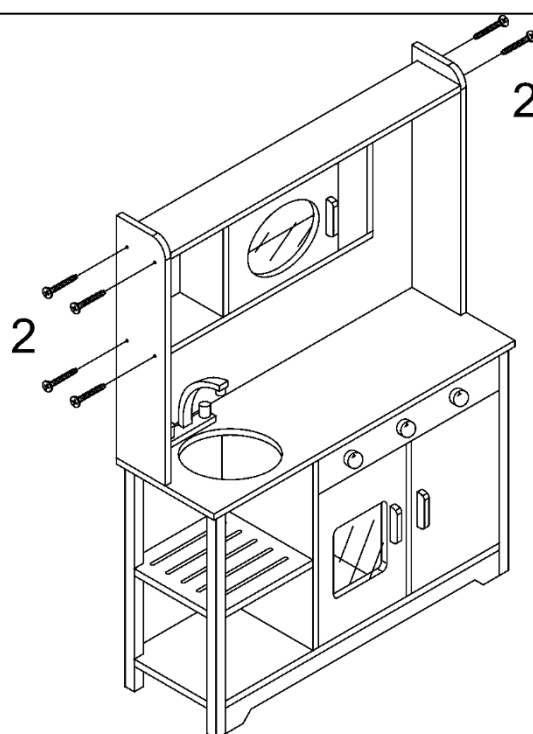 

11

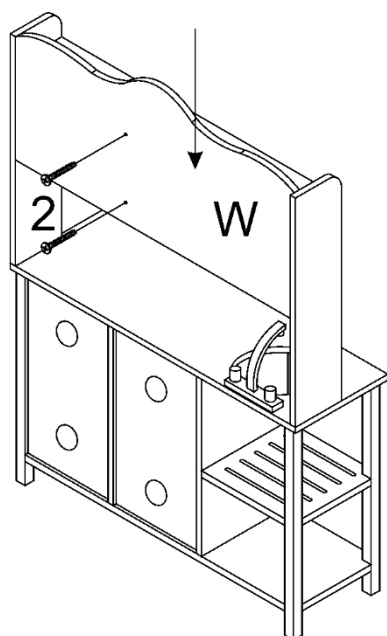 

12

